


8" SURFACE MOUNT HINGE

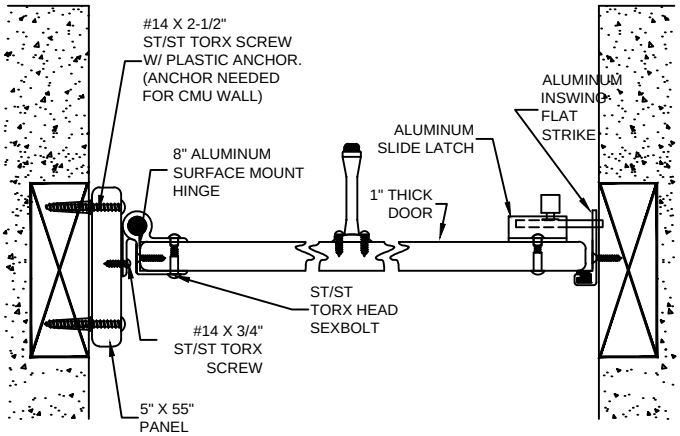


Plan Elevation
IN SWING

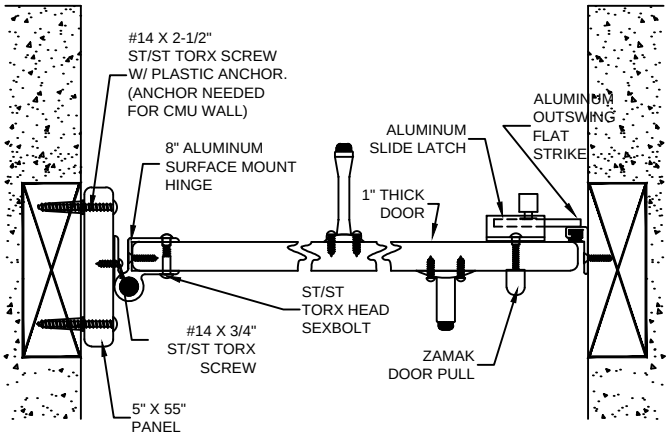


Plan Elevation
OUT SWING

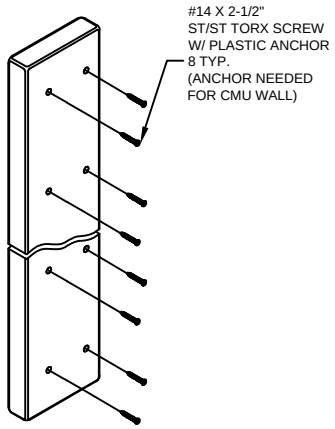

STEP #1

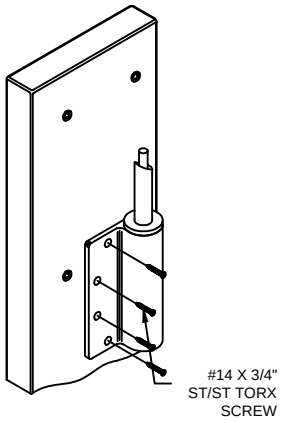

*STEP #2

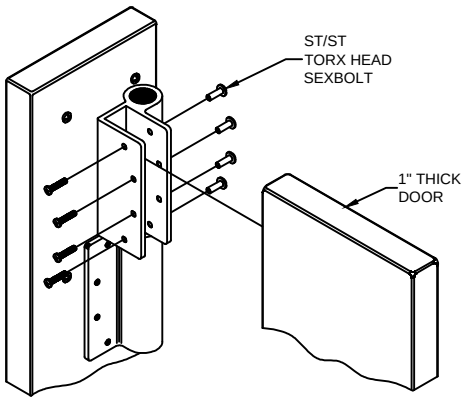

*STEP #3

SCRANTON PRODUCTS

HINY HIDERS TUFFTEC LOCKERS
RESISTALL PARTITIONS

801 E COREY ST. SCRANTON, PA. 18505 Phone (570)348-0997

STANDARD ELEVATIONS
(Drawings are not to scale)
*Shown is for inswing doors, outsiwng door are similar.
Actual door sizes will be 1" smaller than sizes shown on shop drawings.

Note: **"Job-Specific Specifications" for all orders are located on the top of the shop drawing layouts.**

SURFACE MOUNTED HINGE INSTALLATION INSTRUCTIONS

1. Using the supplied 2 ½" torx head screws attach panel to wall @ 14" above the finished floor standard.
2. See Installation Booklet for hinge attachment to the door.
3. Using Comtec Installation Instructions Booklet for reference, attach the hinges to the surface mounted panel using the 3/4" torx screws.